



BARS

USER MANUAL

INSPECTION

Before and after every session we recommend that you check the following.

- Inspect the Kookproof connection points for wear. Do not use your bar if the Kookproof loops are damaged or worn; seek replacement lines from your local dealer.
- Inspect all flying lines. Replace any damaged sections and remove any knots from flying lines. Do not fly with knotted or damaged lines.
- Should any part of your bar become damaged at any time please immediately seek out replacement components from your local dealer or online direct from BEST Kiteboarding.

PACKING AND STORAGE OF BAR

We recommend that you rinse your bar prior to storage. Open the Pro-Cuff+ QR and flush with water. Rinse down through the top of the swivel with running water. Hang the bar up to dry before storing for any length of time. Store the bar with the QR left in the open position.

SAFETY ADVICE

- Wherever possible launch with an assistant.
- Always walk out your lines.
- Never launch or fly with crossed lines.
- Never fly with knotted or damaged lines.
- Never touch your lines when flying.



LIFETIME WARRANTY

To download a detailed USER MANUAL for your chosen BEST Kiteboarding product please go to:
bestkiteboarding.com/manuals



REGISTRATION REQUIRED

Register your product today or you could miss out!
Scan the QR code for more info or visit our website at:
bestkiteboarding.com/fair-and-reasonable



bestkiteboarding.com

2014 BAR ADVICE

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

LEGAL NOTES AND WARNING:

Kiteboarding is an extreme sport. Participants must be aware of the potential risks and danger from cuts, scrapes, bruises, broken bones, loss of limbs, loss of vision, paralysis, and other serious, permanent and disabling injuries and death to the rider and 3rd parties.

When using this product, you are responsible for your own safety and the safety of others around you. Never attempt to use this product as a flying device. Never touch flying lines when the kite is in use.

RELEASE OF LIABILITY AND ASSUMPTION OF RISK

DO NOT USE THIS PRODUCT UNLESS YOU AGREE WITH THE FOLLOWING TERMS AND CONDITIONS:

Before using this product, the purchaser/user has carefully reviewed, understood and agrees to comply with the terms of this User Manual. Use of this product and any of its components involves certain inherent risks, dangers and hazards, which can result in serious personal injury or death. The purchaser/user of this product understands that the seller is not responsible for any damage to property or injury caused by negligent operation of this product by the purchaser/user, and the purchaser/user releases the seller from all such liability. In the event of your death or incapacity, this Agreement shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns and representatives.

The purchaser/user of this product expressly assumes the risk of any and all bodily injury, death and/or liability which may result from the purchaser or user's participation in kiteboarding. The purchaser/user agrees to hold Ride Best, LLC harmless from any and all liability, and waive and release any and all claims or potential claims against Ride Best, LLC and any of its respective agents, affiliates, subsidiaries, employees, instructors, officers, directors, shareholders, suppliers and manufacturers in the event of any such bodily injury or death which may result from the purchase and/or use of Ride Best LLC (d/b/a Best Kiteboarding) products.

RP-BAR AND GP-BAR SAFETY ADVICE

- The Pro-Cuff+ quick release is designed to work with riders between 50-150kgs in weight.
- The Pro-Cuff+ QR will function with front line loads in excess of 10kg, up to and including 200kgs.
- The Pro-Cuff+ QR will not function without any front line tension.
- The RP-bar is compatible with any 4-line or 4-line bridled LEI kite up to 17m2 in size.
- The GP-Bar is compatible with our 5-line range of GP C-kites.
- The Pro-Cuff+ is a push-to-release, front line safety system based on a flexible internal hinge and movable external cuff. The cuff is retained by bungees.
- Neither the RP or GP bars provide any 'dead man safety' functionality.
- Safety is the result of proper learning and a careful assessment of the kiting conditions, including but not limited to wind speed, direction and geographical layout of the surrounding area. Never base your own assessment of safety solely on the function of your QR.
- Never kite in conditions beyond your own ability.
- You cannot learn how to use your safety equipment in an emergency situation, take the time to familiarise yourself with all aspects of your gear and safety equipment functionality and practice its safe activation.
- Your safety system must be regularly maintained and checked. Please rinse your bar after every use.
Always check your QR function before and after every session.
- Check your bar before and after every session for signs of wear or damage.
- If you see wear or damage to any part of your bar or notice a decrease in the function of any part of the safety system, stop using your bar immediately and discuss this with your local retailer, or online at www.bestkiteboarding.com with our support staff for advice on potential replacement of worn parts.

RP-BAR AND GP-BAR CORRECT ATTACHMENT TO RIDER AND HARNESS

The Pro-Cuff+ quick release on both the RP-Bar and GP-Bar requires being attached to a harness spreader bar for correct function. It is compatible with either waist or seat harness's according to rider preference. Correct fitment using the Donkey Stick to retain the Chickenloop in the bar is shown below.

With the Donkey Stick passed over the Chickenloop and back through the spreader bar hook you will not be able to unhook easily from your kite without activating your Pro-Cuff+ quick release. If you prefer being able to unhook easily and quickly and do not mind the risk of accidentally coming unhooked from your kite then we recommend that you do not use the Donkey Stick.

 


RP-BAR V4



The RP-Bar is a four line kite specific control bar and is suitable for all our kites except the GP. The RP-Bar is intended to be used with the Mini-leash as shown below. Clip directly to the Redline attachment ring, do not clip over the chickenloop and then into the attachment ring. The RP-Bar mini leash is not intended to be used in suicide mode and does not provide any form of dead man release functionality.

RP-BAR / GP-BAR BYPASS SAFETY ATTACHMENT MODE

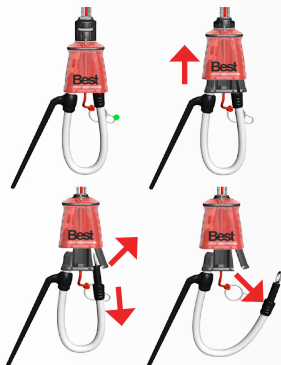

- We recommend that riders use the bypass leash arrangement with all 4-line BEST kites.
- Leash should be clipped to Redline safety attachment ring - **marked green-1st image.**
- Push cuff upwards to start activation.
- Continuing pushing until hinge opens.
- QR fully open, chickenloop line withdraws under pull of kite.
- Chickenloop completely released, kite attached to bar instantly depowers.

You can re-assemble your QR by following the steps in reverse order.

RP-BAR MINI-LEASH:

The 2014 RP-Bar is fitted with a mini-leash with Pinless Safety QR. The karabiner end clips to the Redline ring on your chickenloop, the Velcro loop attaches to either your spreader bar or the rings mounted on the side of your harness.



RP-BAR MIN-LEASH ATTACHMENT POINTS

The Pinless Safety QR will not function correctly if you attach the leash backwards, the karabiner end must be attached to the bar to ensure correct function.



1. Grasp the mini-leash QR in one hand.

 


2. Push firmly towards the kite to activate the QR



3. The QR-cuff will slide upwards, open and disconnect from the harness line.

• Only use in an emergency, an untethered kite poses a significant risk.

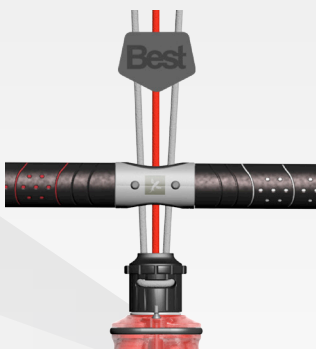

DEPOWER STOPPER:

The Depower Stopper on the RP-Bar can be positioned by hand at any point along the depower rope. When the bar makes contact with the Depower Stopper the stopper will grip the depower ropes and resist the movement of the bar. This reduces the strain on your elbows when flying and allows you to trim your bar travel for a comfortable bar position when flying without adjusting your lines.

 
In gusty riding conditions or in an emergency it is possible to override the Depower Stopper simply by pushing the bar firmly upwards with both hands. The Redline Safety will automatically override the Depower Stopper whenever you activate the Pro-Cuff+ QR or unhook from the bar.

GP-BAR V3



The GP-Bar is a 5-line bar designed for our GP C-kite. The GP-Bar can be rigged with the safety leash in bypass mode, as shown in the RP-Bar example, or in suicide mode as shown below. **Selecting suicide mode reduces the available depower of the kite and should only be used by highly experienced kites in moderate wind speeds.** We do not recommend that any rider rigs their safety in suicide mode when riding in high winds.

GP-BAR SUICIDE MODE

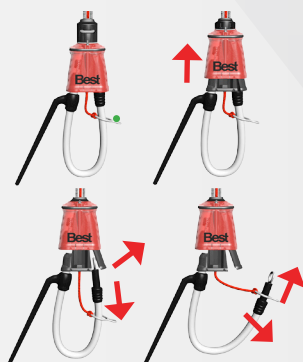

- Suicide mode is only suitable for experienced riders, it reduces depower and safety.
- Attachment Ring should be placed over chickenloop line prior to closure of QR.
- Leash should be clipped to 5th-line ring- **marked green**.
- Push cuff upwards to activate QR.
- Chickenloop line withdraws pulling through attachment ring.
- Attachment ring and 5th-line are tensioned by leash, kite depowers.

You can re-assemble your QR by following the steps above in reverse order.



 
GP-BAR LEASH:

The GP-Bar leash is fitted with a karabiner and swivel at opposite ends. The Pinless Safety QR is the same as on the RP-Bar.

The QR cuff will not function correctly if you attach the leash backwards, the swivel and QR must be attached to the harness.


DEPOWER SYSTEM CLAM CLEAT

All 2014 BEST bars are fitted with our new Clam Cleat depower system. The Clam Cleat depowers and repowers the kite by shortening and lengthening the front flying lines relative to the back flying lines. This is achieved through the adjustment of a single depower rope.

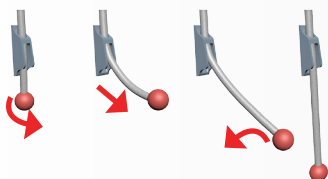

TO DEPOWER THE KITE:

 - Pull the depower rope towards you and slightly upwards to loosen it from the clam cleat.
- Continue to pull the rope towards your chest to depower the kite.
- When the kite is depowered sufficiently pull the depower rope sharply downwards to engage it back into the cleat.
- You can let go when you feel no tension on the depower rope.

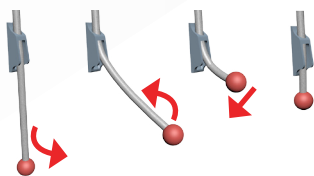


TO REPOWER THE KITE:

- Pull the depower rope down and towards you to loosen it from the clam cleat.
- Lift the rope upwards and allow it to feed back through the cleat to repower the kite.
- When the kite is repowered sufficiently pull the depower rope downwards to engage it back into the cleat.
- You can let go when you feel no tension on the depower rope.

For detailed instructions on how to adjust the depower throw on your new bar please check the video page on the BEST website.

ATTACHING LINES

 
2014 RP-Bar and all 4-line BEST kites come with come fitted with Kookproof attachments to help ensure that you match up the correct flying lines from your bar with the corresponding attachment point on the kite. The GP-Bar and GP kites retain the older none kookproof connection style.

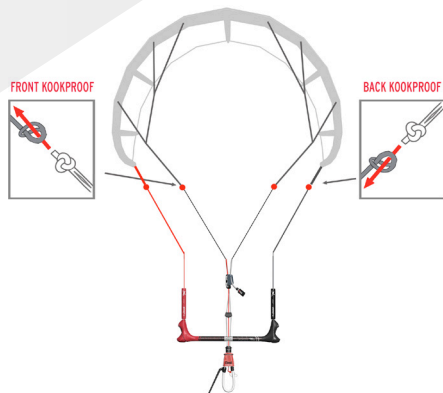

Older kites and bars can be mixed and matched with 2014 gear, simply follow the diagrams above to ensure you have the correct line layout remembering to knot the ends of your front flying lines where required.

BACK LINE ADJUSTMENT

 The RP-Bar and GP-Bar both come with back line adjusters located under the rear line floats . You can trim your back line length to compensate for stretch in your front or rear flying lines.

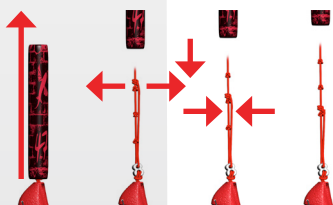

- Push floats upwards to reveal adjusters.
- To adjust loosen the larkshead knot and move it up or down to select the knot you require.
- Moving the larkshead down towards the bar extends the lines and vice versa.
- Once adjusted cinch up the larkshead knot and pull on it to ensure it is tight.
- Never attempt to fly your kite with one back line longer than the other.

**RIDE
WITH US**

bestkiteboarding.com